



OPERATION

1. Take your ActivePure® unit out of the shipping carton and remove all protective materials.
2. Place your unit in an appropriate location which could be four feet or higher from the ground. Never set it on the floor, and place in a location away from the HVAC return duct. The rear of the unit requires one inch or more of open area to allow unrestricted airflow.
3. Insert the Power Supply Plug into the power receptacle on the rear of the unit. Plug the appropriate cord into the Power Supply and into a working electrical outlet.
4. Push the Power button once to turn the unit on.
5. Push the A-PURE/A-PURE x2 button twice to set it to A-PURE x2 level which will be illuminated on the screen.
6. Push the Fan + button four times to reach the highest speed (5th level).

CONGRATULATIONS!

You are now set up to receive automated 24/7 surface and air disinfection.

- **A·PURE MODE:** The unit's display shows the fan speed (low to high) and A·PURE to indicate that the ActivePure® Cell and ionization are both functioning normally.
- **A·PURE x2 MODE:** A·PURE x2 lights up, indicates that (2) ActivePure® Cells and ionization are both functioning normally.
- **ION MODE:** Ion lights up, indicates only ionization is functioning.
- **CLEAN:** Clean illuminates when cleaning is required.
- **RESET:** Clears the maintenance reminders after performing routine maintenance.
- **CELL:** The Cell light will flicker when it is time to replace your ActivePure® Cell.

For maintenance and cleaning instructions, refer to the owner's manual.



READ MANUAL CAREFULLY FOR PROPER USE
AND OPTIMAL OPERATION

ActivePure.com/Manuals
Spanish and French available online

