


# ActivePure®

MODULAR – R

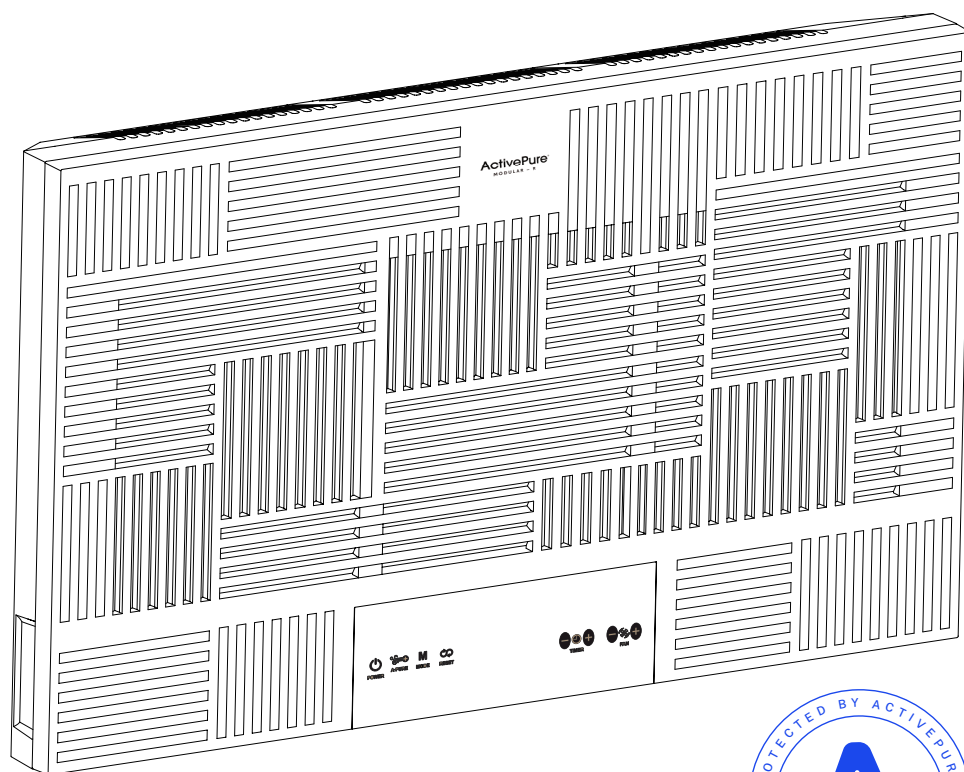

Portable, Wall-Mount Air Purification System

Read manual carefully for proper use and optimal operation.

# General Information

## Product Overview

Congratulations on your purchase! Your new ActivePure® Modular – R is a portable, wall-mount air purification unit that is intended to be a complementary technology to the Induct units or a stand-alone air & surface purification system when an Induct unit cannot be installed. It combines multiple complementary technologies, including HEPA Filtration, Activated Carbon, and ActivePure Technology (optional) to provide air purification in residential settings. Please read and follow all safety warnings and instructions outlined in this owner's manual before operating or performing maintenance.

## Contents

|                                                 |    |
|-------------------------------------------------|----|
| Product Overview .....                          | 2  |
| Specifications .....                            | 2  |
| Storage and Disposal .....                      | 2  |
| Important Safety Instructions .....             | 3  |
| For Canadian Customers Only .....               | 4  |
| Package Contents .....                          | 5  |
| Product Features .....                          | 5  |
| Unpacking the Unit .....                        | 6  |
| Mounting the Unit .....                         | 6  |
| Directions for Use .....                        | 6  |
| Remote Control .....                            | 7  |
| Timer .....                                     | 8  |
| ActivePure 3-Cell Assembly Kit (Optional) ..... | 8  |
| Maintenance Reminders .....                     | 10 |
| General Maintenance .....                       | 11 |
| Replacing the HEPA Filter Assemblies .....      | 12 |
| Replacing the ActivePure Cell Assemblies .....  | 13 |
| Replacement Parts .....                         | 15 |
| Warranty Information .....                      | 15 |
| FCC Declaration & Responsible Party .....       | 16 |

## Fill In and Save

Record information regarding your new ActivePure® Modular – R here. Retain for future reference.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_ Date of Purchase \_\_\_\_\_

Name: \_\_\_\_\_ Phone No. \_\_\_\_\_

Address: \_\_\_\_\_

Sales Representative: \_\_\_\_\_

## Storage and Disposal

Do not dispose of this product as household waste. Electrical waste and electronic products should be appropriately recycled as required by practices established by your local authority.



## Specifications

### ActivePure® Modular – R \_\_\_\_\_

- Sales Number: 00824
- Model Number: E210A

### Meets California ozone emissions limit: CARB certified

### Technology \_\_\_\_\_

- HEPA Filtration
- Activated Carbon
- ActivePure® Technology - (3) 6" Cell Assemblies (optional, sold separately)

### Electrical \_\_\_\_\_

- Rated: 100-240 Volts~, 50/60 Hz, 1.2 Amps

### Mechanical \_\_\_\_\_

- Motor: 230 VAC; 0.28 Amps
- Airflow Rate: (greater than or equal to) 200 CFM
- Fan Speed: 27.5 - 61.5 Watts
- Air Exchange: 4.2 changes per hour (351/sq. ft.)
- CADR: 150

### Sound Level \_\_\_\_\_

- 49.6 dB(A)

### Safety \_\_\_\_\_

- Conforms to UL STD. 507

### Weight & Dimensions \_\_\_\_\_

- 18.1 lbs (8.2 kg)
- 16.9" H x 28.5" W x 4.5" D  
(43 cm x 72.5 cm x 11 cm)

### Recommended Max. Coverage in a Contiguous Space \_\_\_\_\_

- Residential not to exceed 2,000 sq. ft. (185.5 m2);  
High Density Commercial not to exceed  
600 sq. ft. (55.7 m²)<sup>1</sup>
- For coverage in medical or healthcare environments,  
contact [Medical@activepure.com](mailto:Medical@activepure.com)

### Warranty \_\_\_\_\_

- Limited Two (2) Year Warranty
- Terms and conditions may apply

We reserve the right to change or modify any specification without notice.

If you have any questions regarding this product, please contact your Sales Representative or Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com)

# Important Safety Instructions

---



- Eye damage may result from directly viewing the light produced by the bulb used in this product; always turn off & unplug unit before removing Filters or ActivePure Cells
- **DO NOT** operate this unit without the Filters or Cover installed
- Disconnect Power Cord before cleaning or servicing
- When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:

Read this manual in its entirety before using your ActivePure® Modular – R.

Keep out of the reach of children.

- Use only in the manner intended by the manufacturer; if you have any questions, contact your Sales Representative
- Connect to properly grounded outlets only
- To reduce the risk of electrical shock, do not change the plug in any way; **DO NOT** use adapters
- **DO NOT** attempt to repair or adjust any of the electrical or mechanical functions; contact your Sales Representative for service information
- When drilling into wall, do not damage electrical wiring and other hidden utilities
- **DO NOT** operate unit near heat sources, open flame, or combustible vapors or gases
- **DO NOT** use this fan with any Solid-State Speed Control
- **DO NOT** use outdoors or on wet surfaces
- **NEVER** place your unit where it may fall into a bathtub or other water container; to protect against electrical hazards, **DO NOT** immerse in water or other liquids
- **DO NOT** allow to be used as a toy; do not allow children around the unit
- **DO NOT** handle appliance with wet hands
- **DO NOT** allow foreign objects to enter the ventilation openings
- **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the air cleaner
- Keep hair, clothing, fingers, and all parts of body away from openings

Save these instructions.

# For Canadian Customers Only

---

## ActivePure® Modular – R

Sales No: 00824

This UV device helps reduce the spread of viruses in the air.

**Keep out of the reach of children.**

**Please read the label and owner's manual before using:** [activepure.com/manuals](http://activepure.com/manuals)

### PRECAUTIONS:

**WARNING:** UV radiation emitted from this device. Unintended use of the device, or damage to the housing, may result in exposure to ultraviolet radiation. Ultraviolet radiation may cause eye and skin irritation. Avoid exposing eyes and skin to ultraviolet radiation.

**FIRST AID INSTRUCTIONS:** Please contact your healthcare provider in the event of injury caused by this device.

### DIRECTIONS FOR USE:

After finding a suitable inside location to mount the unit, preferably a flat interior wall away from the HVAC return duct, plug the Power Cord into a working electrical outlet. Please see this manual for detailed instructions on using, handling, storing and disposing of the device, and procedures to mitigate any associated risks.

The use of this device is a supplement to and not a substitute for standard infection control practices; users must continue to follow all current infection control practices, including those related to the cleaning and disinfection of environmental surfaces.

### FOR INQUIRIES CONTACT:


Aerus Canada, Inc.  
Laird Business Park  
3480 Laird Road, Units 2-5  
Mississauga, Ontario, Canada, L5L 5Y4

W. Parrell, Manager  
(905) 569-9399  
[wparrell@aerusonline.com](mailto:wparrell@aerusonline.com)

Aerus Canada, Inc. is affiliated with ActivePure Manufacturing, LLC  
1300 Valley Drive, Bristol, VA 24201


# Package Contents

- ActivePure Modular - R portable, wall-mount air purification system
- 8 ft. Power Cord
- Mounting Bracket
- Phillips Screwdriver
- 1-1/4" Screws (Qty 10)
- Drywall Anchors (Qty 10)
- Level
- Remote Control w/ Wall Mount Holder
- 5/8" Screws (Qty 4)
- Quick Start Guide

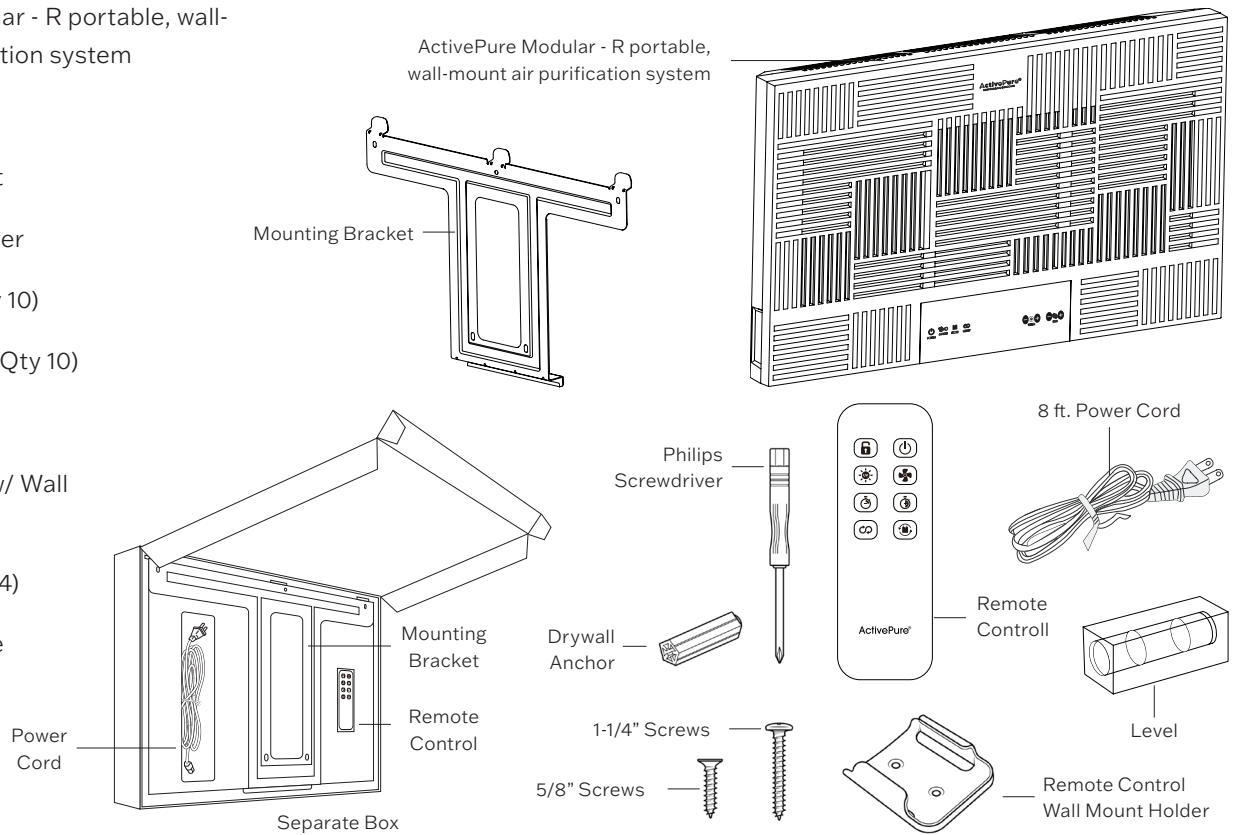

# Product Features

- Multiple complementary technologies, including HEPA Filtration, Activated Carbon, and ActivePure Technology (optional, sold separately)
- Reduces VOC gases, smoke, and odors without the use of ozone
- 3-fan design with five (5) adjustable Fan speeds
- Lightweight and easy to install
- Mounts on Wall Bracket
- Easy to move locations
- Control Panel with Remote Control

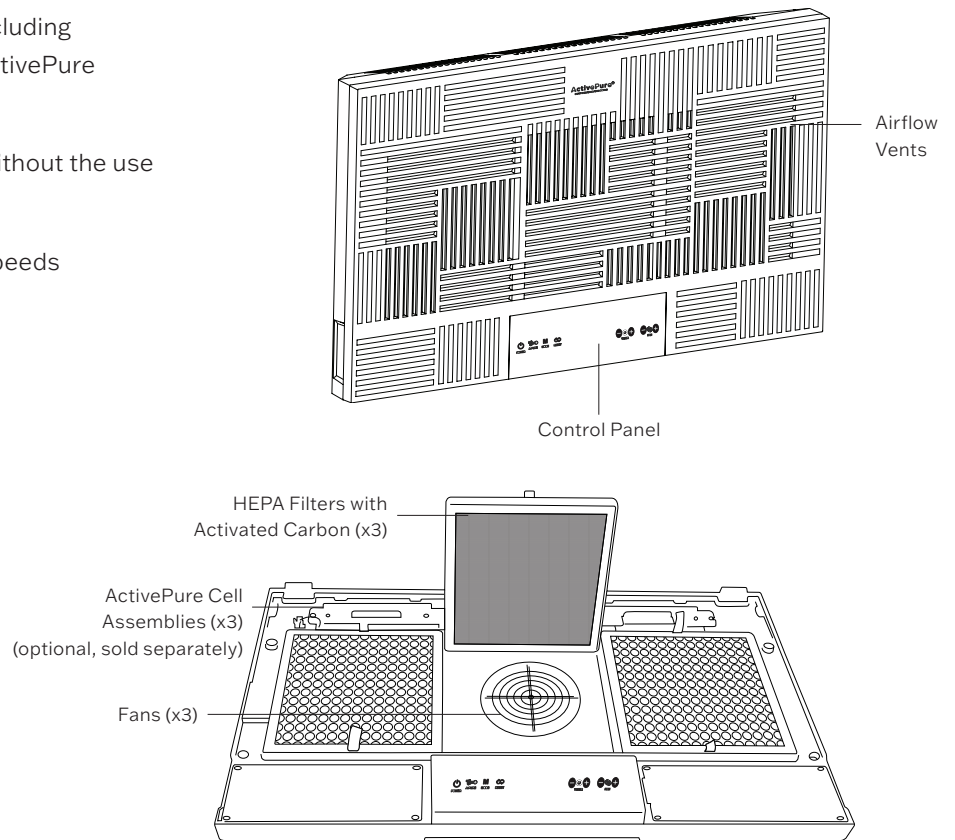

# Unpacking the Unit




## UNPACKING THE ACTIVEPURE MODULAR - R

1. Take your ActivePure Modular - R unit out of the shipping carton and remove all protective materials.
2. Remove the unit from the protective poly bag.
3. Remove the blue tape that was securing the Front Cover from coming off during shipping.
4. Gently pull the Front Cover away from the unit. No tools are required, the Cover is secured with magnets.
5. Take all three HEPA Filters out of their protective poly bags and reinstall.
6. If you have the optional 3-cell Assembly Kit, open that carton and follow the Quick Start Guide or UNPACKING THE ACTIVEPURE 3-CELL ASSEMBLY section on PG 7. and, if you do not, then continue to Step 7.
7. Reinstall the Front Cover by aligning the Front Cover with the unit and allowing the magnets to pull it securely into place.

**NOTE: Unit will not operate if the Front Cover is not correctly attached.**

8. Remove the protective film from the Front Control Panel.
9. Remove the Mounting Bracket (and hardware), Remote Control (2 AAA batteries needed, not included), and Power Cord from the brown box.

**NOTE: Use of the Remote Control is not mandatory, but optional.**

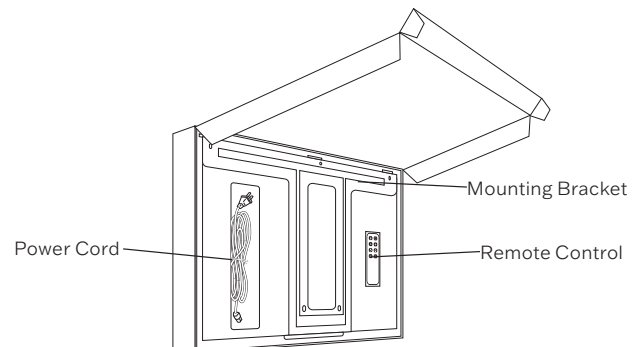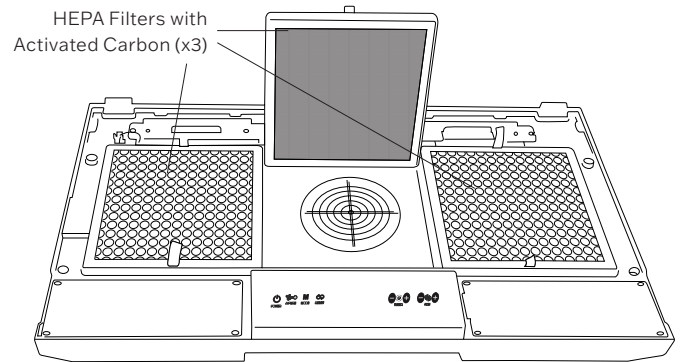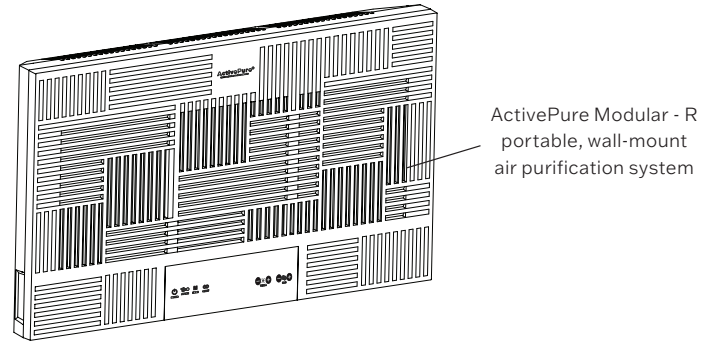

# Installing the ActivePure 3-Cell Assembly Kit (Optional)

## UNPACKING THE ACTIVEPURE MODULAR - R 3-CELL ASSEMBLY KIT (CELL PART# 50369)

1. Remove the (3) ActivePure Cell Assemblies from the shipping carton and remove all protective materials.

## INITIAL 3-CELL ASSEMBLY KIT INSTALLATION

**NOTE:** If you are replacing the ActivePure Cells see “Replacing the ActivePure Cell Assemblies” section in this Owner’s Manual. Remove the ActivePure Modular - R unit from the Mounting Plate on the wall.

### 1. Remove the Front Cover:

- Gently pull the Front Cover away from the unit
- No tools are required, the cover is secured with magnets

### 2. Remove the Top Access Panels:

- Using a Phillips head screwdriver, remove the six (6) screws securing the three (3) Top Access Panels to the Cell Assembly Chambers

**NOTE:** Keep the six (6) screws, they will be used in Step 4.

- Lift and remove each panel to expose the ActivePure Cell Assembly Chambers
- Dispose of the three (3) Top Access Panels; they are no longer needed

### 3. Install the (optional) ActivePure Cell Assemblies:

- Plug the ActivePure Cell into its corresponding connector
- Insert the ActivePure Cell into an empty chamber
- DO NOT pinch the wires on the ActivePure Cell Assembly
- Repeat this process for all (3) ActivePure Cell Assemblies

### 4. Secure the ActivePure Cell Assemblies:




- Using the (6) screws removed in Step 2, tighten all (6) Phillips head screws until the ActivePure Cells are secure

### 5. Reinstall the Front Cover:

- Align the Front Cover with the unit and allow the magnets to pull it securely into place.

**NOTE:** Unit will not operate if Front Cover is not correctly attached.

6. Remove the protective film from the front of the Control Panel.

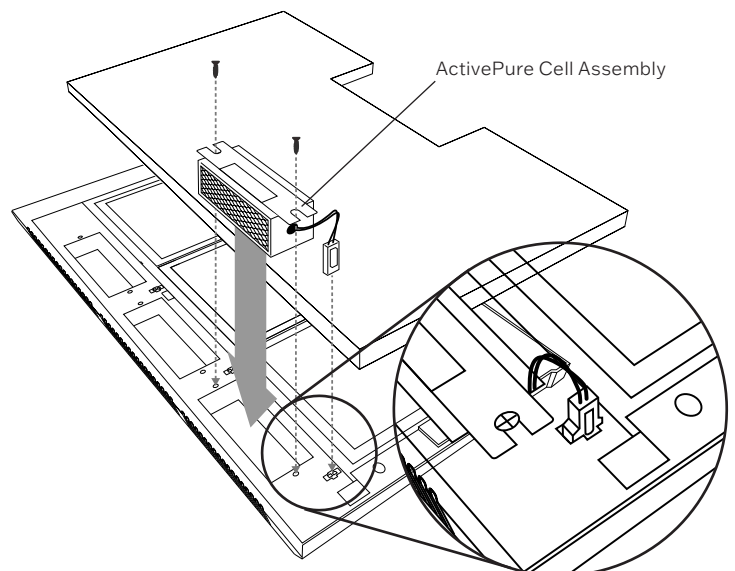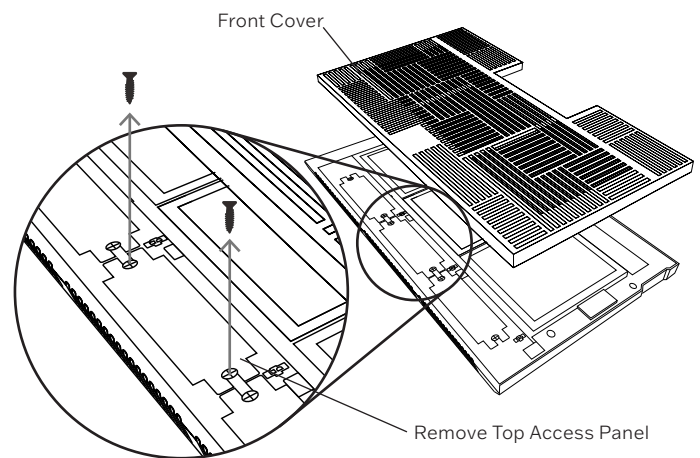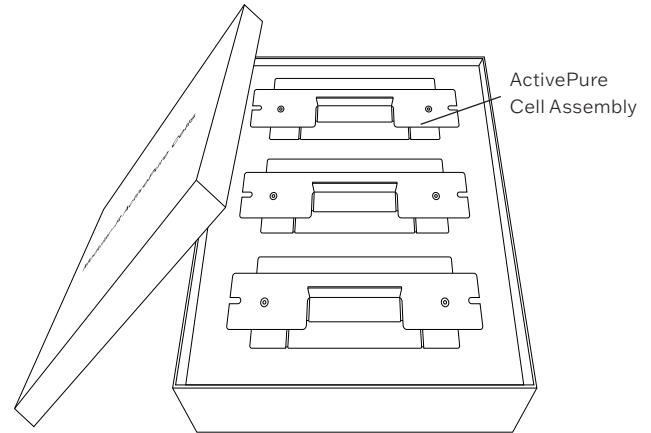


# Mounting the Unit


## MOUNTING THE ACTIVEPURE MODULAR - R

Unit is designed to be mounted on an interior wall.


1. Find a suitable indoor location to mount the unit, preferably a flat interior wall away from the HVAC return duct and close to a working electrical outlet.
2. Place the Mounting Bracket at a predetermined position on the wall (we recommend the top of the unit is above eye level). Mark the precise location you want to place (4) Drywall Anchors (provided), using the Level (provided). (Figure 1)
3. Drill (4) pilot holes on the marked spots using a 1/8" drill bit and push the (4) Drywall Anchors into the wall. If necessary, tap the anchor lightly with a hammer until it's flush with the wall.
4. Place the Mounting Bracket on the wall and align the holes to screw in the (4) 1-1/4" screws (provided) into the Drywall Anchors.
5. Place the (3) open slots located on the back of the unit onto the (3) hooks on the Mounting Bracket, and let it lock into place. (Figure 2)
6. Plug the Power Cord into a working electrical outlet.

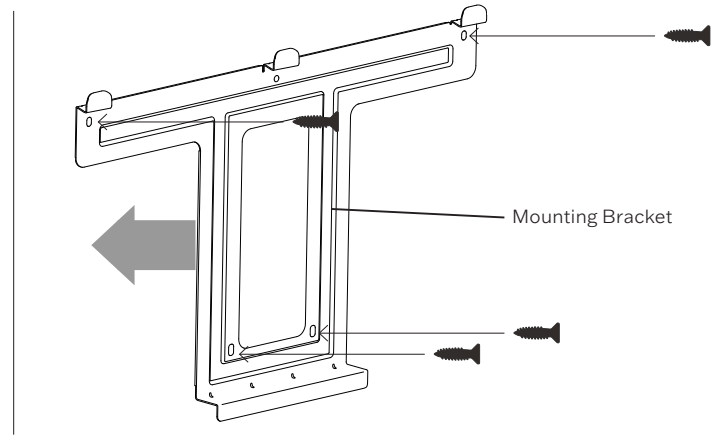

(Figure 1)

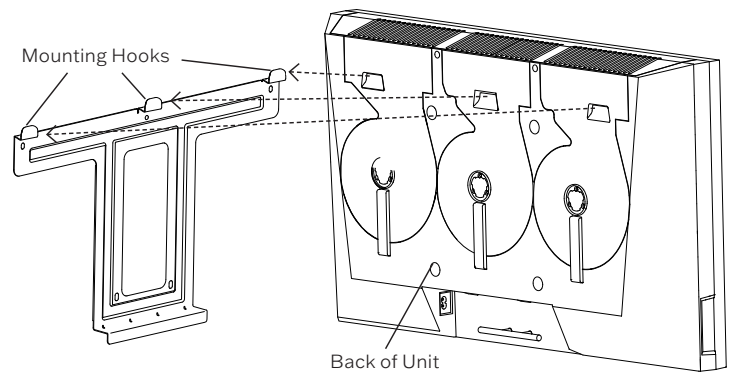

(Figure 2)

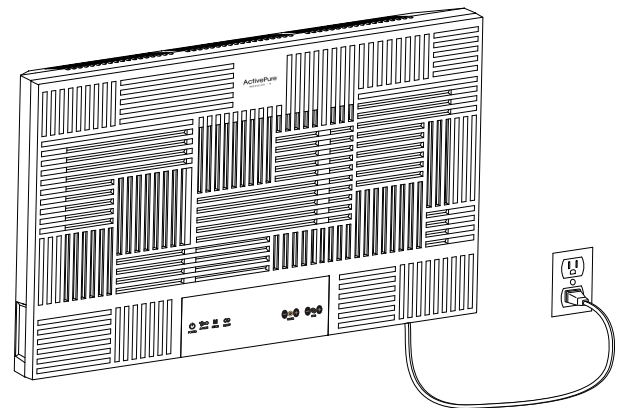


# Directions for Use



**WARNING**

- UV Light in operation; before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally; when the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel
- When using an electrical appliance, basic precautions should always be taken
- To reduce risk of fire, electrical shock, or injury to persons, observe the following:

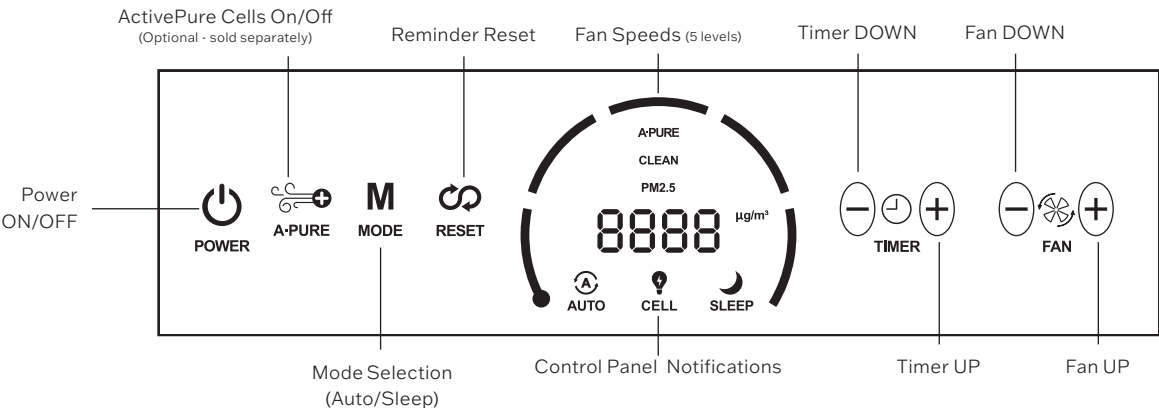

## DIRECTIONS FOR USE

1. Press the **Power** button once to turn the unit on. **AUTO** will illuminate on the screen.
2. Press the **MODE** button to change from **AUTO** mode to **MANUAL** mode or **SLEEP** mode. The unit defaults to operating in **AUTO** mode when the unit is turned on and will operate 24/7.
3. If you do not want to have the unit operating 24/7, you can press **TIMER+** to set the **TIMER** from 1 hour up to 8 hours. (see Operating the Timer on PG 8)
4. If in **MANUAL** mode, push the **FAN +** button up to four (4) times to reach the highest speed (5th level) to initially clear the air in the room. Once the air is cleared, set to the desired Fan speed.

## SETTINGS

- 

**POWER:** Turns the unit **ON** and **OFF** (Standby).
- 

**A-PURE:** Turns the optional ActivePure Cells **ON** or **OFF** (Optional - sold and installed separately).
- 

**MODE:** Adjusts between the **AUTO/MANUAL/SLEEP** modes. The device runs in **AUTO** mode by default.

**AUTO:** **AUTO** icon will illuminate and will enable self-adjusting Fan speeds based on the PM2.5 concentration in the room.

**MANUAL:** By pressing **MODE** once, the unit shifts to **MANUAL** mode and the **AUTO** icon will not be illuminated any longer. In **MANUAL** mode you can set the desired **FAN** speed.
- 

**FAN:** Adjusts the 5-speed Fan **UP** and **DOWN**. The curved bars display the fan speeds from 1 (low) to 5 (high).

**SLEEP:** By pressing **MODE** twice (2x), the **SLEEP** icon will dimly illuminate and the unit will reduce to the minimum Fan speed, and the Control Panel will no longer be illuminated.
- 

**RESET:** Clears the maintenance reminders after performing routine maintenance.
- 

**TIMER:** The **TIMER** can be set for 1 to 8 hours. The display will show an increase in hours set 1H, 2H, 8H as you press **TIMER+** to cycle through the program. The display will show a decrease in hours set as you press **TIMER**. At the end of the set time the unit will turn **OFF**.

# ActivePure 3-Cell Assembly Kit (Optional)

---

## OPERATING THE OPTIONAL ACTIVEPURE CELLS

### (After Mounting the Unit)

1. Touch the **POWER** button to turn on the device.
2. The unit starts in **AUTO** Mode and displays the current PM2.5 reading.
3. The three (3) ActivePure Cells are disabled by default at startup, and the **A-PURE** indicator light remains off.
4. If you have installed the three (3) ActivePure Cells, press the **A-PURE** button once. The **A-PURE** icon on the Control Panel will illuminate.
5. The three (3) ActivePure Cells will activate sequentially:
  - First ActivePure Cell turns **ON**.
  - Second ActivePure Cell turns **ON** after a 2-second delay
  - Third ActivePure Cell turns **ON** after an additional 2-second delay

## POWER OFF & ACTIVEPURE CELL RESTART

When the ActivePure Modular - R is powered **OFF** and then restarted:

- If the three (3) ActivePure Cells were **ON** before shutdown, they will automatically turn **ON** after restart
- If the three (3) ActivePure Cells were **OFF** before shutdown, they will remain **OFF** after restart

## POWER LOSS RECOVERY

- After a power loss, the ActivePure Cells remain disabled, by default, when the power is restored
- To reactivate the three (3) ActivePure Cells, follow the steps listed under **OPERATING THE OPTIONAL ACTIVEPURE CELLS** in this owner's manual

## ACTIVEPURE CELL STATUS INDICATORS

### Solid blue CELL light (illuminated):

- All (3) ActivePure Cells are functioning normally

### Blue flashing CELL light (once per second):

- ActivePure Cells have reached the end of their operating life and need to be replaced
- Replace all (3) ActivePure Cell Assemblies
- Once replaced, press and hold the **RESET** button while the unit is plugged in and not powered on (standby)

### Red flashing CELL light (1 second on / 1 second off):

- Indicates ActivePure Cell system fault
  - o One or more bulbs failed
  - o UV circuit damage

### If a fault is indicated:


1. Immediately unplug the Power Cord from the electrical outlet.
2. Replace the defective (3) ActivePure Assemblies.
3. Plug the Power Cord back into the electrical outlet.
4. Power on the unit and then follow the steps listed under **OPERATING THE OPTIONAL ACTIVEPURE CELLS** in this owner's manual.
5. The **CELL** icon will stop flashing now that the issue is resolved.

For Questions on Installing or Operating the ActivePure Modular-R, please contact your Sales Representative or Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com).

# Remote Control


## OPERATING THE REMOTE CONTROL

1.  **CHILD LOCK:** Press and hold for 3 seconds to lock and unlock the Child Lock feature.
2.  **A-PURE:** ActivePure Cells **ON/OFF** (Optional - sold and installed separately)
3.  **TIMER DOWN:** Press to decrease the amount of time set on the Timer.
4.  **RESET:** Press and hold for 3 seconds, while unit is operating to reset the Filters.
5.  **POWER:** Press to turn the Power **ON/OFF**
6.  **FAN:** Cycle through the five (5) Fan speed settings from lowest to highest. When the Fan is at the highest setting, pressing the button again will return it to the lowest setting.
7.  **TIMER UP:** Press to Increase the amount of time set on the Timer.
8.  **MODE:** Press to switch between the **AUTO/ MANUAL/ SLEEP** modes.

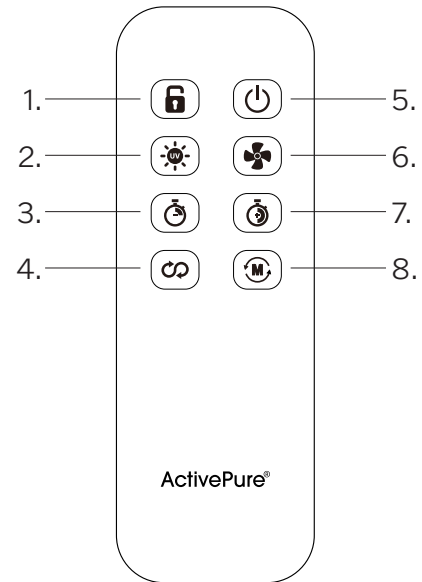

## REMOTE CONTROL WALL MOUNT

1. Position the Remote Control Wall Mount on the wall near the ActivePure Modular - R.
2. Firmly screw the Wall Mount into the wall using the (2) 5/8" screws provided.

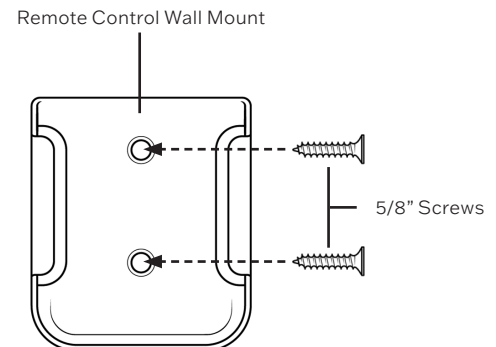

# Timer

## SETTING THE TIMER

1. While the unit is running, press the **TIMER +/-** button.
2. A beep will sound, and the display will switch from **PM2.5** to the Timer setting. The **PM2.5** indicator light will turn off.
3. If no Timer is currently set, the screen will show 0H. Press the button again to select a time between 1-8H.
4. Stop pressing the button. After 5 seconds, the timer will automatically confirm and start.

## AFTER SETTING THE TIMER

5. The display will return to **PM2.5** mode
  6. The screen will alternate between the time on the Timer and the **PM2.5** readings
- When the Timer reaches 0, the unit will turn off completely and all indicator lights will turn off

## NOTES:

- The Timer resets when the machine turns off. It must be set again each time the unit restarts.
- If power is interrupted, the Timer will be cancelled and must be reset. Other settings will remain unchanged.

## ADJUSTING THE TIMER WHILE RUNNING

You can change the Timer at any time while it is active.

1. Press **TIMER +/-**. A beep will sound and the display will show the remaining time.
2. Press the **TIMER** button again to select a new Timer duration.


### Example:

If you originally set 3H and 1.5 hours have already passed, pressing the Timer button will show 2H remaining (not 1H). You may then adjust the Timer from this point.

## CANCELING THE TIMER

1. Press **TIMER +/-** while a Timer is active.
2. Continue pressing until the display shows 0H.
3. When set to 0H, the Timer is cancelled.

# Maintenance Reminders

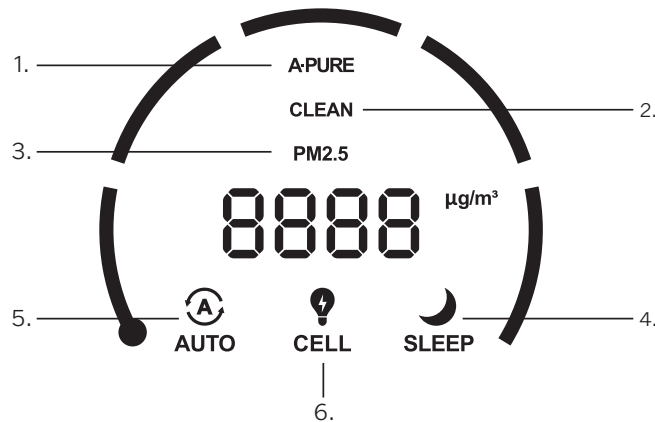

1. **A·PURE:** Illuminates to indicate the (3) optional ActivePure Cells are operating.
2. **CLEAN:** Flashes blue (once per second) when it's time to replace the (3) Filters (6 months).
3. **PM 2.5:** Illuminates while unit is ON, particles with a diameter 2.5 micrometers and smaller.
4. **µg/m³:** Illuminates while unit is ON, the unit of measurement for the concentration of air pollutants, representing micrograms per cubic meter.
5. **AUTO:** Unit defaults to operating in **AUTO** mode and will automatically adjust the Fan speed based on **PM2.5** readings in the environment.
6. **CELL:** Flashes blue (once per second) to indicate that the optional ActivePure Cells have reached the end of the life of operation and should be replaced (12 months).
7. **SLEEP:** Illuminates when **SLEEP** mode is active. Press the **MODE** button to change to **SLEEP** mode. In **SLEEP** mode, the Fan operates at its quietest speed for minimal noise.

# General Maintenance



**Unplug the unit before performing any maintenance procedures.**



**Failure to perform routine maintenance could adversely affect the proper function of the unit or cause it to fail prematurely.**

1. Periodic maintenance is required to ensure that your ActivePure Modular - R operates properly. The unit will display a **CLEAN** reminder when it's time to perform regular maintenance. If you are operating your unit in a severely polluted environment, cleaning of the unit, ActivePure Cell Assemblies, and HEPA Filter Assemblies should be done more frequently. Shown here are basic procedures that should be carried out to keep your unit running at top performance.

**NOTE: If a unit is returned for repair, and it is determined that neglect of the unit or unauthorized tampering with any mechanical or electronic component of the unit caused the failure, ActivePure reserves the right to void the product warranty. This will require the owner to pay for any required repairs.**

## CLEANING THE CASE

Wipe the unit with a soft cloth dampened (not wet) with water. Do not use chemicals or solvents.

Vacuum the Top and Rear Grills periodically to remove any lint buildup.

When the CLEAN indicator light flashes blue (or every 30-180 days), it's time to clean the Filter Assembly.

## CLEANING THE HEPA FILTER ASSEMBLIES

1. When visibly dirty, simply remove the Cover from the unit.
2. With a hand-held vacuum, remove dust and debris that has collected on the (3) HEPA Filter Assemblies. This method will enhance the performance of the unit.

## HEPA FILTER ASSEMBLIES (6 Month Replacement)

The HEPA Filter Assemblies filter out airborne particles (dust, pollen, pet dander, mold spores, and other airborne particles). To maximize filter effectiveness, particles are negatively charged before reaching the filter.

To replace the HEPA Filter Assemblies, please follow the instructions on page 14.

**NOTE: HEPA Filter Assembly life will vary based on the operating environment.**

## ACTIVEPURE CELL ASSEMBLIES (12 Month Replacement)

Our proprietary ActivePure Cell Assemblies that are found in the ActivePure Modular - R use light waves and a catalytic process to create Advanced Photohydrolysis molecules that inactivate contaminants found in the air.

To replace the ActivePure Cell Assemblies, please follow the instructions on pages 15-16.

**For questions on maintenance procedures, please contact your Sales Representative or Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com).**

# Replacing the HEPA Filter Assemblies



Unplug the unit before performing any maintenance procedures.






Use genuine ActivePure replacement parts only; parts from anyone other than an authorized ActivePure Representative may damage your unit and void your warranty.

1. Unplug the ActivePure Modular - R from its power source and remove from the Mounting Bracket on the wall.
2. Remove the Cover of the ActivePure Modular - R unit by lifting the Cover off of the base.
3. Remove the old HEPA Filters by lifting up on the tab located on either end of the filter and replace with new replacement HEPA Filters.

**NOTE:** Place the HEPA Filters back into the unit with the Activated Carbon side facing down.

4. Place the Cover back onto the unit and hang the unit back onto the Mounting Bracket on the wall.
5. Plug the Power Cord back into the working electrical outlet.

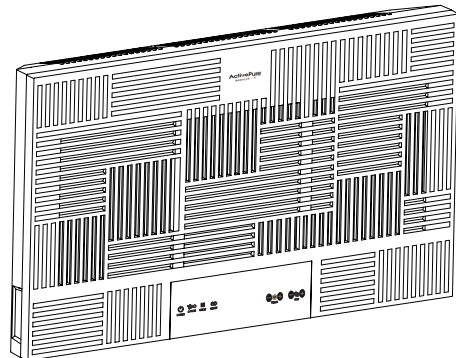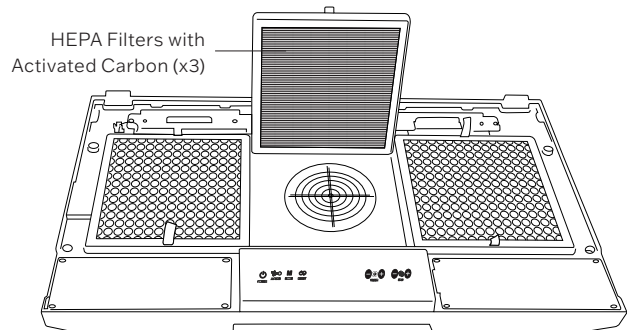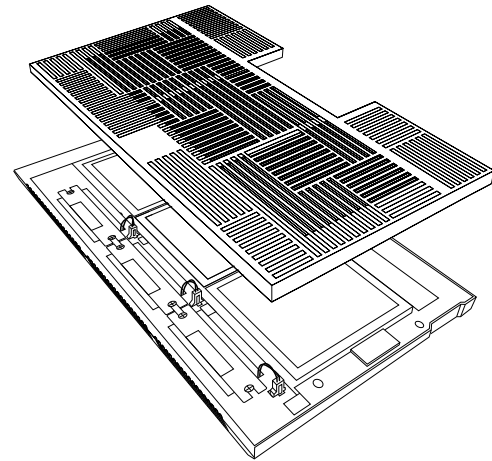

For questions on maintenance procedures, please contact your Sales Representative or Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com).

# Replacing the ActivePure Cell Assemblies




- Unplug the unit before performing any maintenance procedures
- DO NOT look directly at the glowing bulb; prolonged exposure, even to reflected UV light, can cause eye damage according to the American Conference of Governmental Industrial Hygienists (ACGIH) Standards




Use genuine ActivePure replacement parts only; parts from anyone other than ActivePure may damage your unit and void your warranty.

1. Unplug the ActivePure Modular - R from its power source and remove from the Mounting Bracket on the wall.

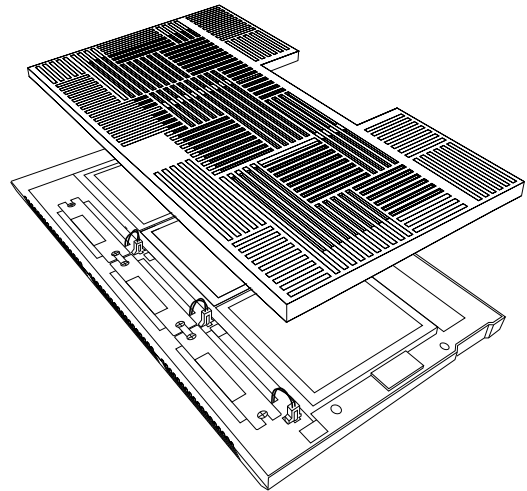


2. Remove the Cover of the ActivePure Modular - R unit by lifting the Cover off of the base.

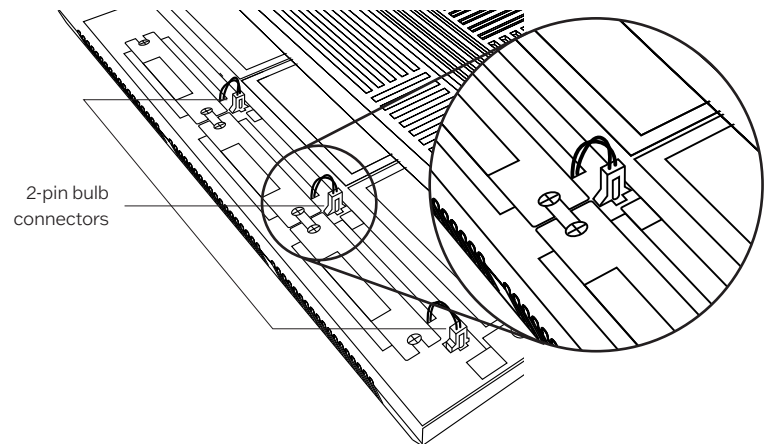


3. Unplug the three (3), 2-pin bulb connectors from the ActivePure Cell Assemblies.

4. Remove the six (6) screws holding the ActivePure Cell Assemblies in place.

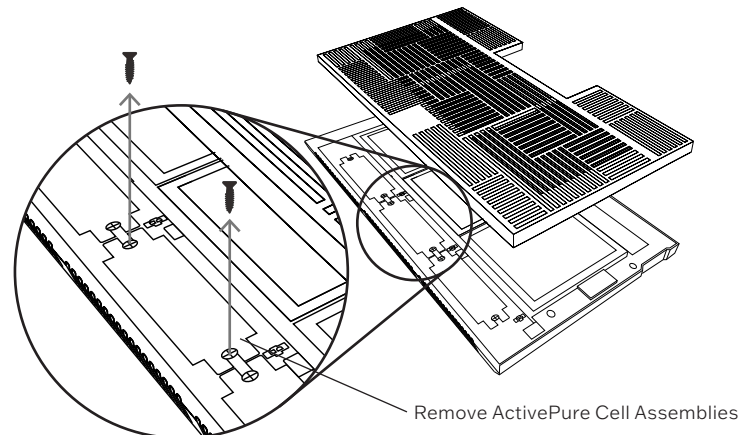


# Replacing the ActivePure Cell Assemblies (continued)

5. Remove the old ActivePure Cell Assemblies.

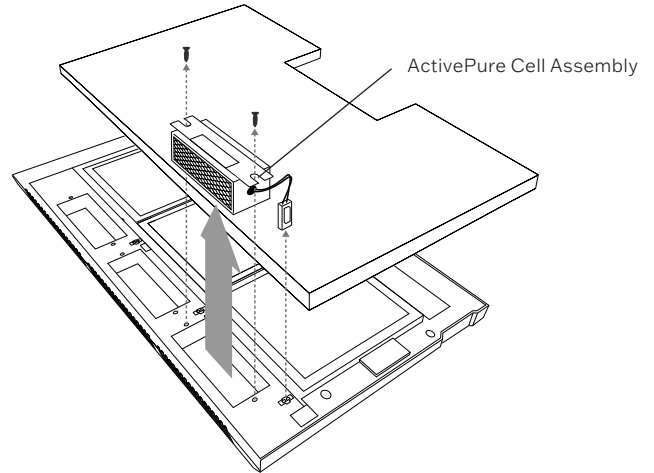


6. Insert one ActivePure Cell Assembly into each of the three chambers, tighten the six Phillips head screws until secure, and plug each ActivePure Cell Assembly into its corresponding connector.

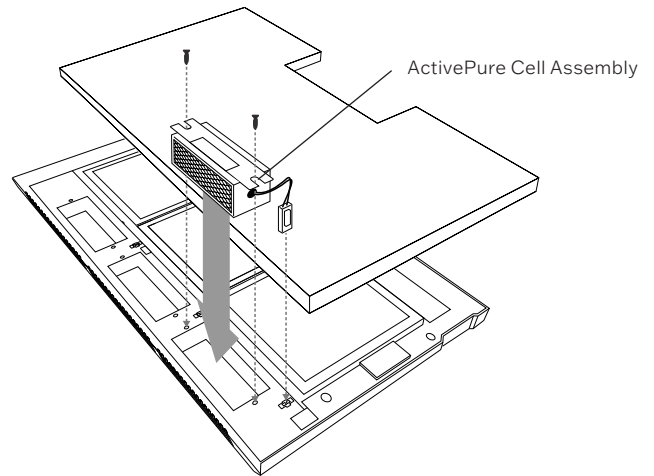

7. Place the Cover back onto the unit and hang the unit back onto the Mounting Bracket on the wall.

8. Plug the Power Cord back into the working electrical outlet

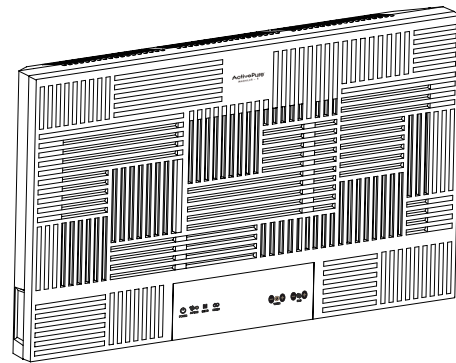

Visit [lamprecycle.org](http://lamprecycle.org) for proper bulb disposal regulations


For questions on maintenance procedures, please contact your Sales Representative or Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com).

# Replacement Parts




Use genuine ActivePure replacement parts only; parts from anyone other than an authorized ActivePure Representative may damage your unit and void your warranty.


| REPLACEMENT PARTS                                                                                      | PART NUMBER |
|--------------------------------------------------------------------------------------------------------|-------------|
| ActivePure® Modular - R 3-Cell Assembly Kit<br><b>NOTE:</b> Includes (3) 6" ActivePure Cell Assemblies | 50369       |
| HEPA Filter Assembly Kit<br><b>NOTE:</b> Includes (3) HEPA Filters                                     | 50372       |
| 8 Foot Power Cord (Black)                                                                              | 50289       |

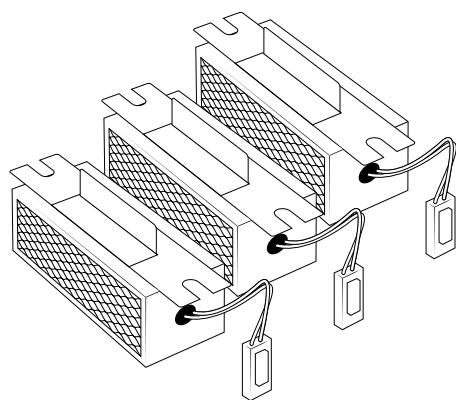

ActivePure® Modular - R 3-Cell Assembly Kit

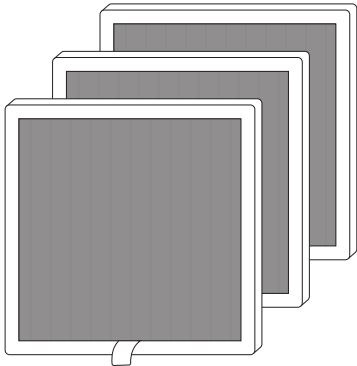

HEPA Filter Assembly Kit

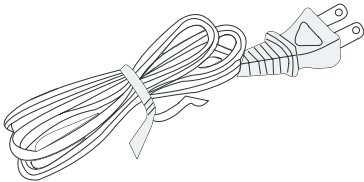

8 Foot Power Cord (Black)

For questions on ordering replacement parts, please contact your Sales Representative or Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com).

# Warranty Information

## Limited Two (2) Year Warranty

To register your ActivePure® Modular – R unit, please visit [ActivePure.com/warranty](https://ActivePure.com/warranty) or contact Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com).

Customer should not repackage and ship the ActivePure Modular – R unit due to possibility of irreparable damage. For questions on warranty service, please contact Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com).

### WHAT IS COVERED BY THIS WARRANTY

We warrant the ActivePure Modular – R (excluding Filter HEPA Assemblies) to the customer, subject to the conditions below, against defects in workmanship or material, provided that the products are returned to an authorized ActivePure location within the following time periods:

- ActivePure Modular – R within two (2) years from date of purchase
- ActivePure® Cell Assemblies (Qty 3) within twelve (12) months from date of purchase

### MAINTENANCE REQUIREMENTS

This warranty is expressly conditioned upon proper operation, cleaning and maintenance, all in accordance with the Owner's Manual. Failure to meet any of these requirements will void this warranty. Servicing the ActivePure Modular – R by parties other than an authorized ActivePure Representative and/or using parts other than genuine ActivePure parts will also void this warranty.

#### This warranty is contingent upon:

- Registration of the product through the approved methods listed above
- Replacing the ActivePure Cell Assemblies (Qty 3) every twelve (12) months with a genuine ActivePure part (proof of change may be required)
- Cleaning the HEPA Filter Assemblies (Qty 3) every (30–90) days, according to instructions in Owner's Manual
- Replacing the HEPA Filter Assemblies (Qty 3) every six (6) months with a genuine ActivePure part (proof of change required)

### HOW TO OBTAIN WARRANTY SERVICE

Customer must register their product at [ActivePure.com/warranty](https://ActivePure.com/warranty) or contact Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com) and provide proof of purchase (including purchase date) within the above time periods. We will repair or replace and return the product, without charge and within a reasonable period of time, subject to the conditions herein, if its examination shall disclose any part to be defective in workmanship or material. If we, in our discretion, are unable to repair the product after a reasonable number of attempts, we will provide either a refund of the purchase price or a replacement unit, at the company's option.

### WHAT IS NOT COVERED BY THIS WARRANTY

Ordinary wear and tear shall not be considered a defect in workmanship or material. These warranties do not apply to filters nor for loss or damage caused by accident, fire, abuse, misuse, modification, misapplication, failure to maintain the product as provided herein, or by any repairs other than those provided by an authorized ActivePure location. This warranty is non-transferable.

### UNAUTHORIZED CHANNELS AND MISSING SERIAL NUMBERS

If a valid serial number is missing from the product, the warranty will be voided. ActivePure products are authorized for sale through ActivePure Sales Representatives only. Warranties are voided if a product is purchased through unauthorized channels, this includes websites that are not authorized to sell our products OR to use ActivePure trademarked names,

images and logos as well as Internet auction sites (e.g. eBay and Craigslist).

The only approved Internet presence for ActivePure products is [activepure.com](https://activepure.com). To confirm warranty coverage prior to purchasing a product, please contact Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com) with the serial number located on the unit.

### EXCLUSION OF OTHER WARRANTIES AND CONDITIONS

EXCEPT AS PROVIDED HEREIN, AND TO THE EXTENT CONSISTENT WITH APPLICABLE LAWS, WE MAKE NO REPRESENTATION OR WARRANTY OF ANY KIND. ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

### LIMITATION OF LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES

TO THE EXTENT CONSISTENT WITH APPLICABLE LAWS, WE SHALL NOT IN ANY CASE BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM BREACH OF EXPRESS OR IMPLIED WARRANTIES, CONDITIONS, GUARANTEES OR REPRESENTATIONS, BREACH OF CONTRACT, NEGLIGENCE OR ANY OTHER LEGAL THEORY. Such excluded damages include, but are not limited to, loss of profits or revenue and loss of the use of the products.

### FOR U.S. APPLICATION ONLY

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on warranties, or on remedies for breach. In such states, the above limitations may not apply to you.

### FOR CANADIAN APPLICATION ONLY

**Exclusion of Subsequent Owners:** Except as otherwise required by applicable legislation, this warranty is not transferable. This warranty gives you specific legal rights and you may also have other rights which vary from province to province. Some provinces and territories do not allow limitations on warranties, or on remedies for breach. In such provinces or territories, the above limitations may not apply to you.

If any provision of this warranty or part thereof is held by a court of competent jurisdiction to be invalid, illegal or unenforceable, the validity, legality and enforceability of the remaining provisions or parts thereof will not in any way be affected or impaired within the jurisdiction of that court. This entire warranty shall continue to be valid, legal and enforceable in any jurisdiction where a similar determination has not been made.

### This warranty is provided by:

ActivePure Manufacturing, LLC  
1300 Valley Drive  
Bristol, VA 24201

### SERVICE

Every effort is made to ensure customers receive an up-to-date owner's manual on the use of our products; however, from time to time, modifications to our products may without notice make the information contained herein subject to alteration. For the latest information, please view the owner's manual at [activepure.com/manuals](https://activepure.com/manuals).

# FCC Declaration & Responsible Party

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment may generate, use, or could radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the Independent Contractor for help.

## FCC DECLARATION OF CONFORMITY

**Name:** ActivePure® Modular – R

**Model:** E210A

**Manufactured for:** ActivePure Manufacturing, LLC

This device complies with Part 15 of the FCC Rules.

## RESPONSIBLE PARTY

ActivePure Manufacturing, LLC

1300 Valley Drive,

Bristol, VA 24201

Ph: 800.572.1446

**Signature:**



**Printed Name:** Andrew Eide

**Title:** Chief Technology, Product &  
Regulatory Officer

**Date:** 09/28/2026

For information regarding the use of this product, please contact Customer Service at 800.572.1446 or email [customerservice@ActivePure.com](mailto:customerservice@ActivePure.com).

**ACTIVEPURE.COM**

© ActivePure Manufacturing, LLC. All Rights Reserved

